


## 5.2 - HOUSING REMOVAL


### **Step 1:**

Remove the Knobs. Refer to Figure 13 - Knob Removal on Page 33

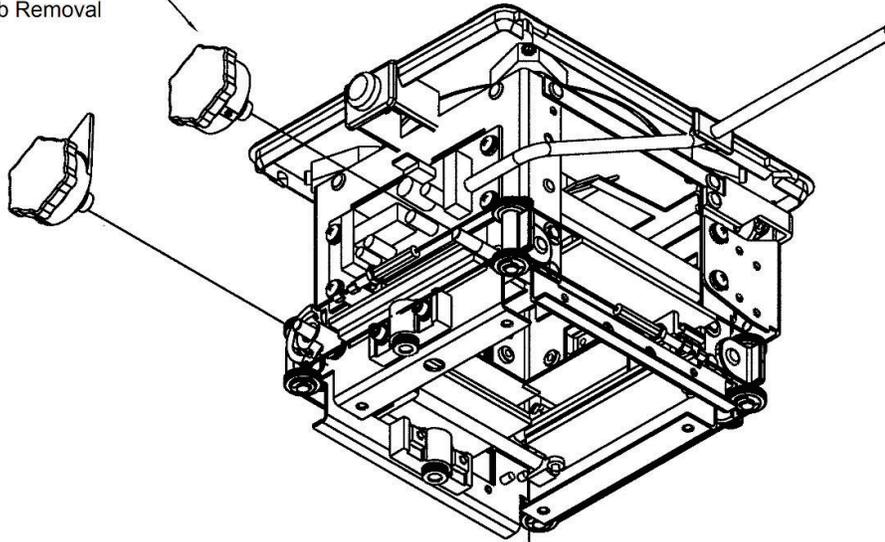

### **Step 2:**

Remove the 8-32 Screws To Drop Housing From Chassis.

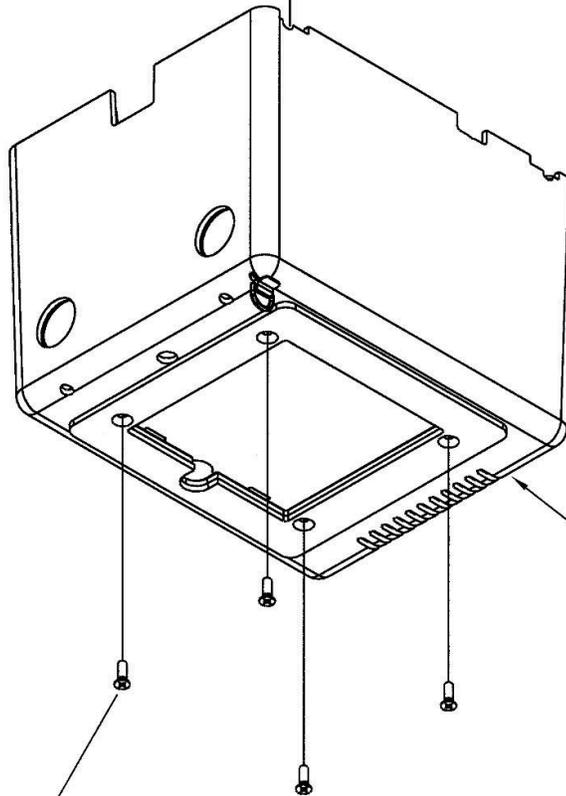

### **Step 3:**

The Housing Is A Close Fit.

Angle the Housing to Clear The Knob Shafts.

Use Caution As You Remove The Housing To Clear Internal Mechanisms.

Figure 14 - Housing Removal